

HASCO SET Insert drivers update

1. Download of the pnp direct insertion drivers from CADClick
https://www.hasco.com/de/hasco/hasco_set
2. Rename the pnp folder to something else e.g. pnp_org
3. Put the download file to the installation folder as seen on the screenshot:

